


GE SB 48-IN NEON FLEX LED DEER

ASSEMBLY INSTRUCTIONS

82303



Assembly Parts

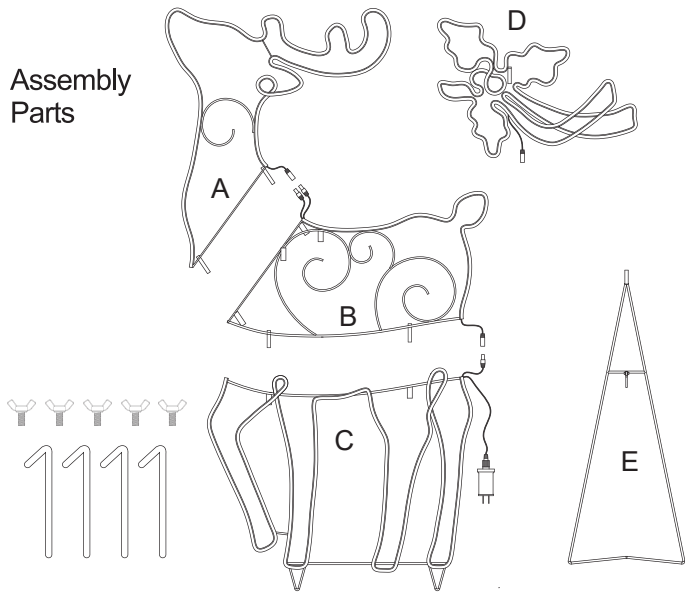

Step 1: Insert part B into C according to the figure, and tighten the screw to lock. Connect the male and female power cables.


Step 2: Insert B into part E according to the figure, and tighten the screw to lock. Insert the hook into the hole.

Step 3: Insert part A into B according to the figure, and tighten the screw to lock. Connect the male and female power cables.


Step 4: Insert part D into B according to the figure, and tighten the screw to lock. Connect the male and female power cables.

Step 5: Fix the four stakes at E and C according to the figure.


Step 1

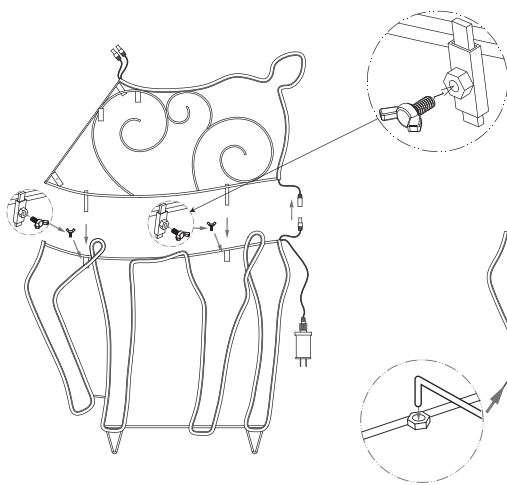


Step 2

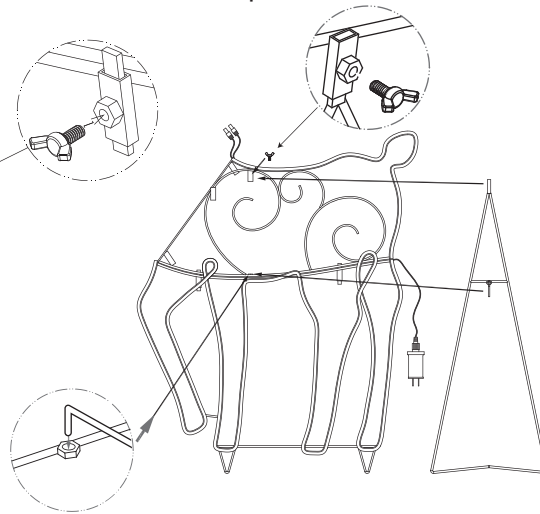


Step 3

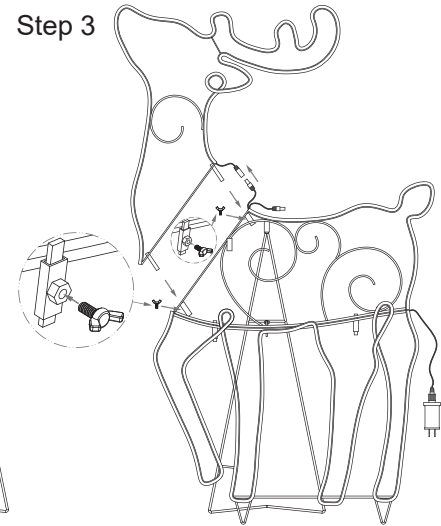


Step 4

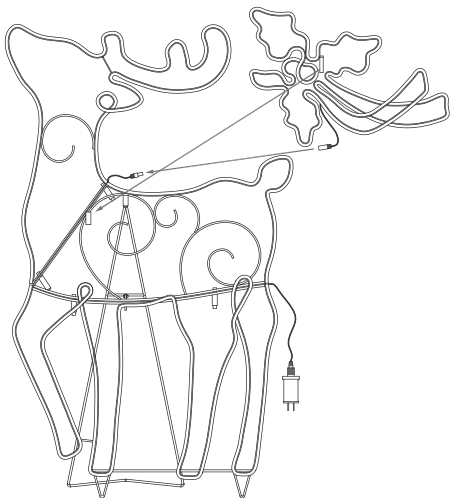

Step 5

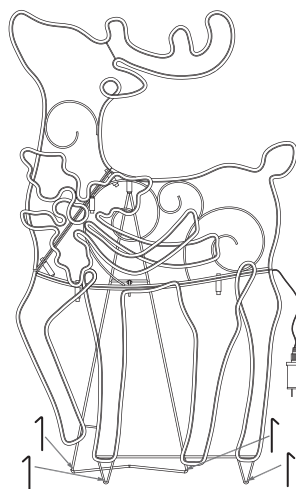

Assembly Complete

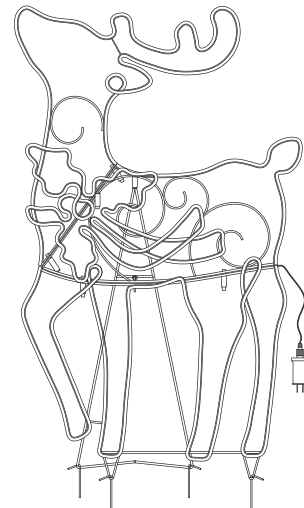


GE SB 48 "NEÓN CURVO CIERVO

INSTRUCCIONES DE ENSAMBLAJE

82303



Piezas de ensamble

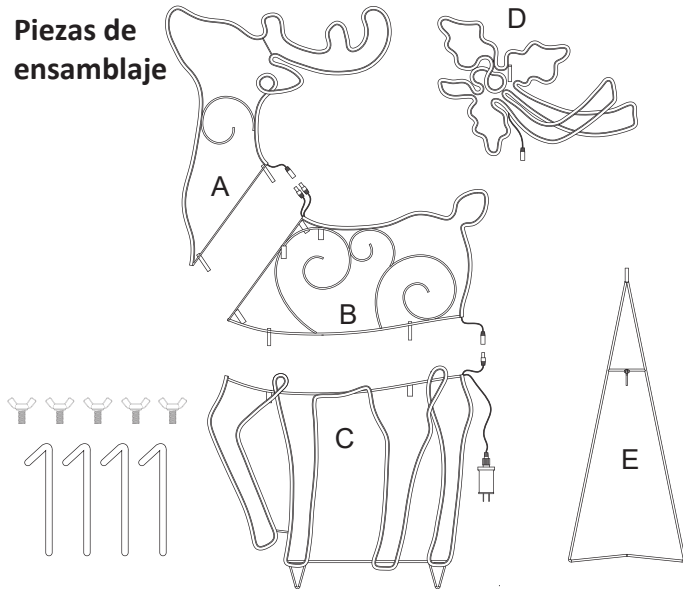

Paso 1: Insertar la parte B en C de acuerdo con la figura, y apretar el Tornillo a cerrar. Conecte los cables de alimentación macho y hembra.


Paso 2: Insertar B en la parte E de acuerdo a la figura, y apretar el Tornillo a cerrar. Inserte el gancho en el agujero.

Paso 3: Insertar la parte A en B de acuerdo con la figura, y apretar el Tornillo a cerrar. Conecte los cables de alimentación macho y hembra.


Paso 4: Acuerdo con la figura, y apretar el Tornillo a cerrar. Conecte los cables de alimentación macho y hembra.

Paso 5: Fijar las cuatro estacas en E y C según la figura.


Paso 1

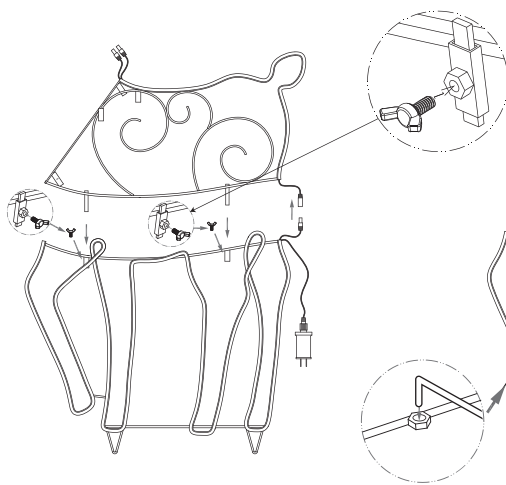


Paso 2

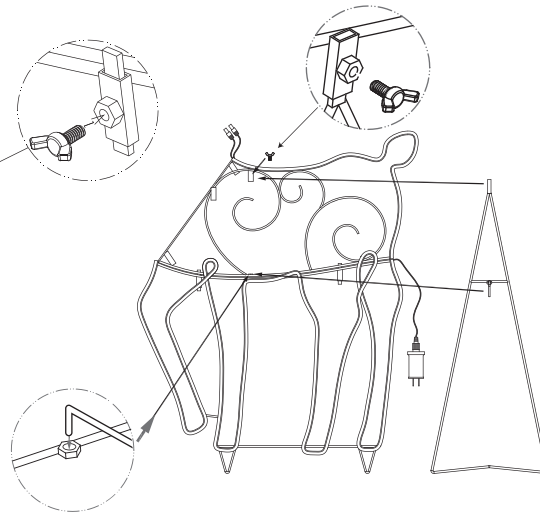


Paso 3

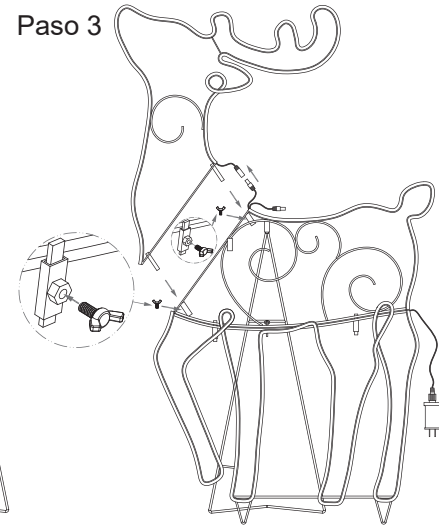

Paso 4

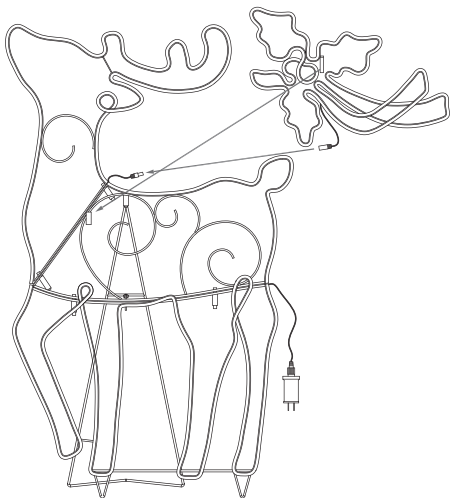

Paso 5

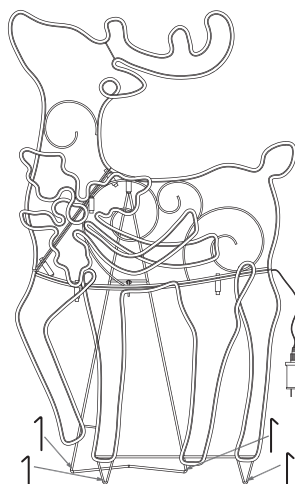

Ensamblaje completado

