


# GE SB 48-IN NEON FLEX LED SNOWMAN

## ASSEMBLY INSTRUCTIONS

NHL Model No. 82001LO



### Assembly Parts

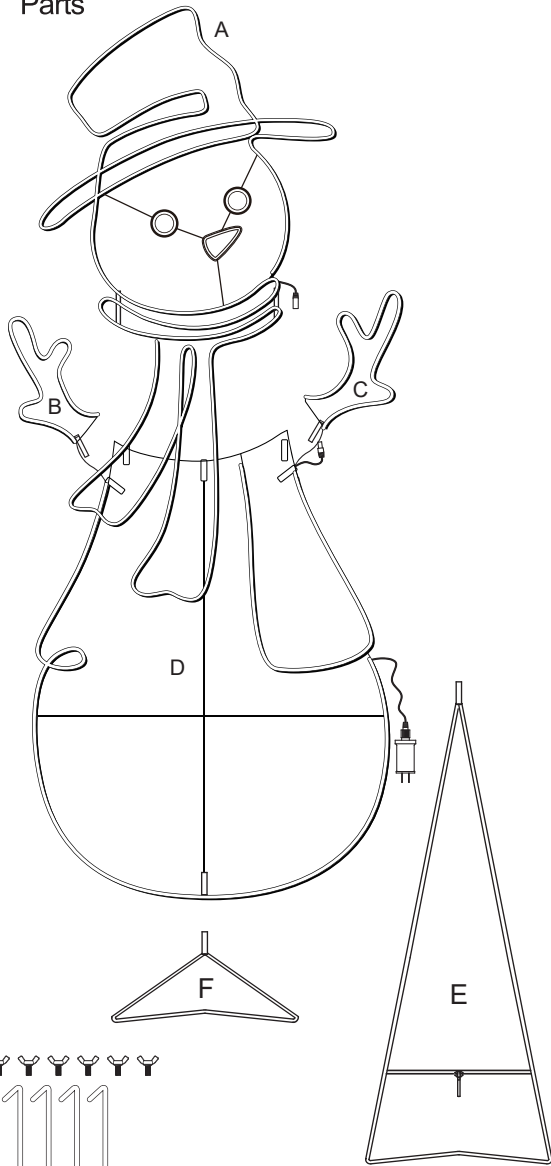


**Step 1:** Insert part B/C/E/F into D according to the figure, and tighten the screw to lock. Connect the male and female power cables.


**Step 2:** Insert A into part D according to the figure, and tighten the screw to lock. Insert the hook into the hole.

**Step 3:** Fix the four stakes at D and E according to the figure.


### Step 1

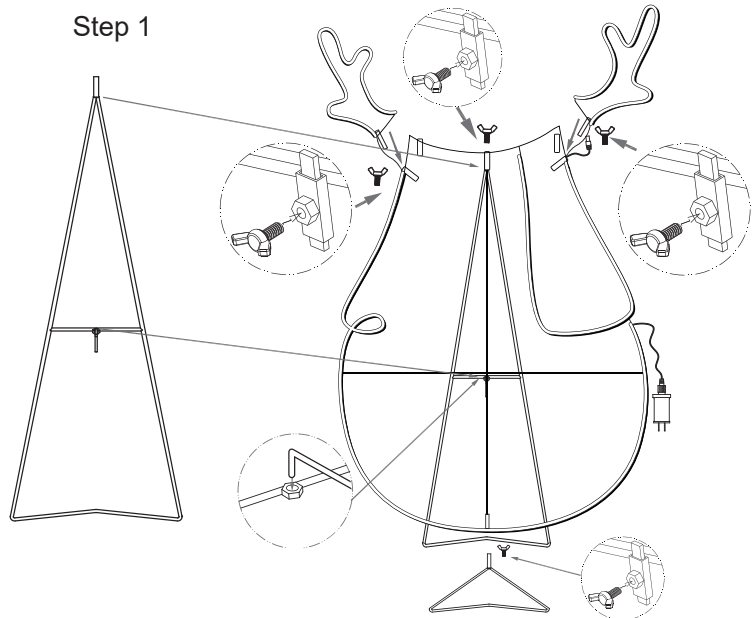


### Step 2

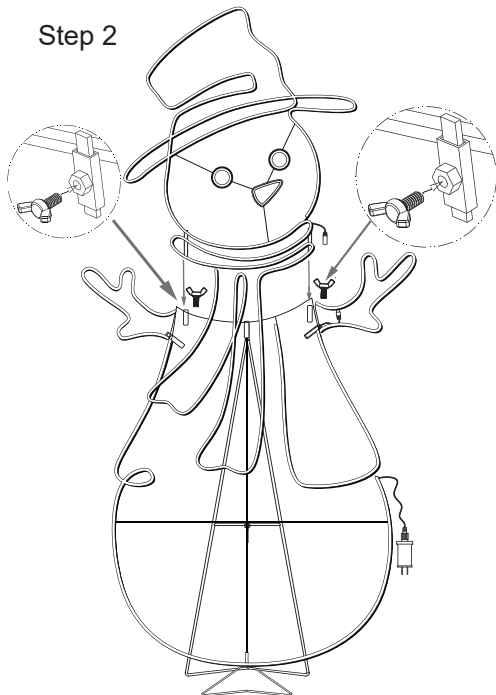

### Step 3

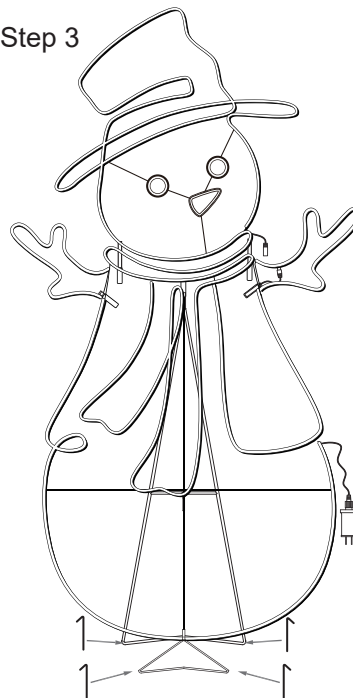

### Assembly Complete

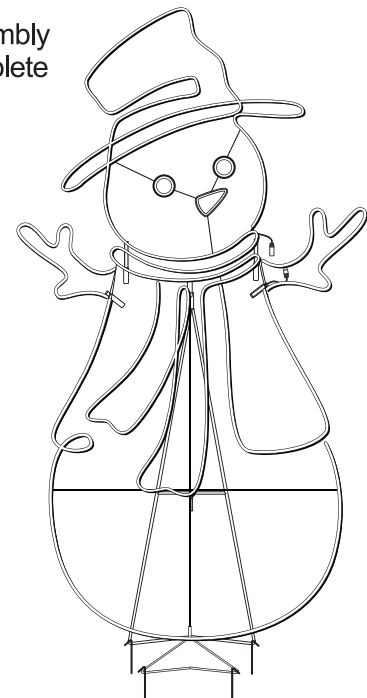


# GE SB 48" NEÓN FLEXIBLE MUÑECO DE NIEVE

## INSTRUCCIONES DE ENSAMBLAJE

NHL Modelo No. 82001LO



### Piezas de ensamblaje

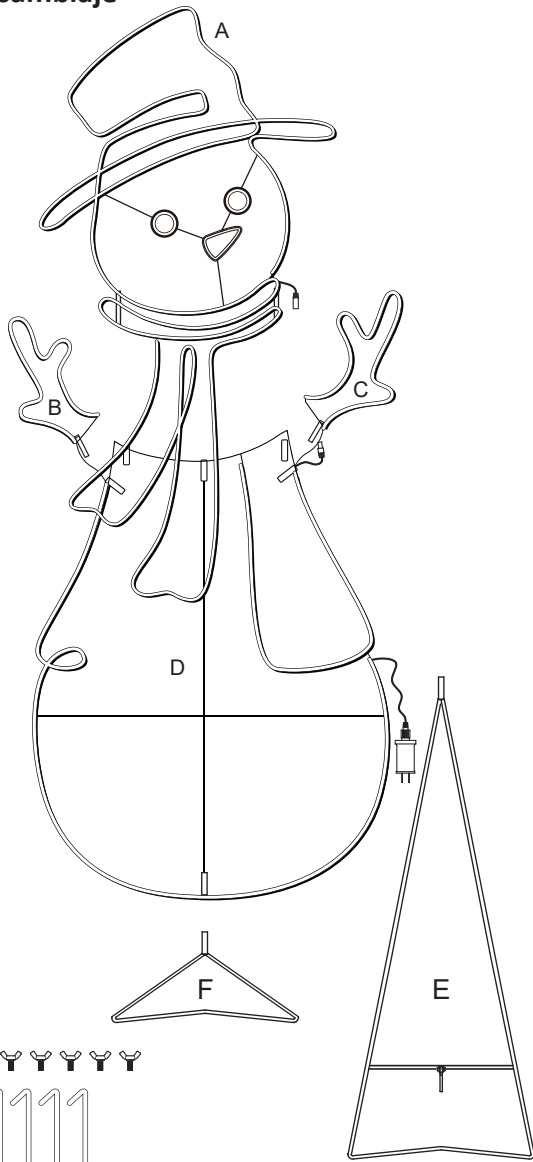


**Paso 1:** Insertar la parte B/C/E/F en D de acuerdo con la figura, y apretar el Tornillo a cerrar. Conecte los cables de alimentación macho y hembra.

**Paso 2:** Insertar A en la parte D de acuerdo a la figura, y apretar el Tornillo a cerrar. Inserte el gancho en el agujero.

**Paso 3:** Fije las cuatro estacas en D y E según la figura.


### Paso 1

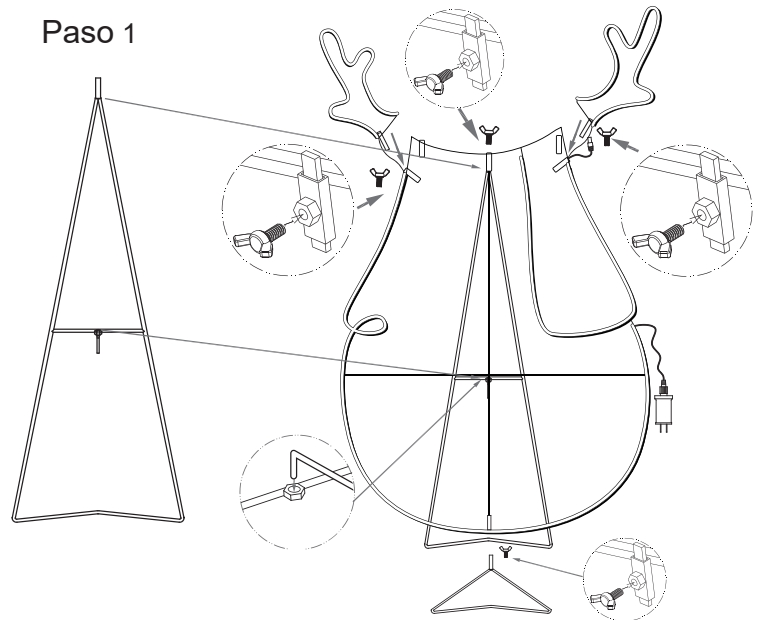

### Paso 2



### Paso 3

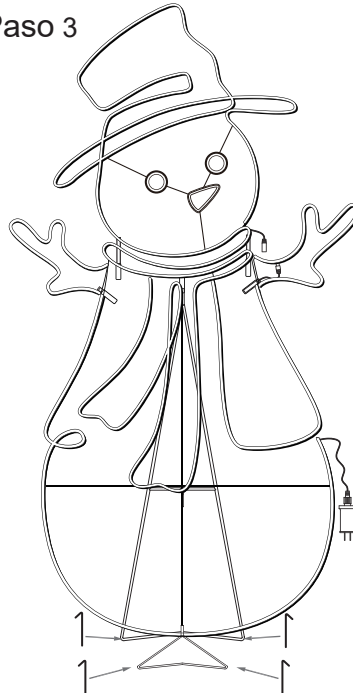

### Ensamblaje completado

