

ITM. / ART. 1227283

## IMPORTANT SAFETY INSTRUCTIONS

Color Effects® RGB LED 36L G28 String set Model: RGB1C-G28-36  
When using electrical products, basic precautions should always be followed including the following:

## READ AND FOLLOW ALL SAFETY INSTRUCTIONS

### CAUTION:

- To reduce the risk of fire and electric shock:
  - Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal, and
  - Do not mount or support strings in a manner that can cut or damage wire insulation.

- This is an electrical product - not a toy! To avoid the risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- Do not use this product for other than its intended use.
- This seasonal use product is not intended for permanent use or installation.
- Unplug when leaving the house, when retiring for the night, or if left unattended.
- Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Do not hang ornaments or other objects from cord, wire, or light string.
- Do not place lighting string on carpeting, drapes, furniture, or allow it to contact vinyl siding while the power is on.

- Do not perform any maintenance or troubleshoot for bad or broken lamps while the power is on.
- Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- Do not cover the product with cloth, paper or any material not part of the product when in use.
- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
- Do not let lamps rest on the supply cord or on any wire.
- Read and follow all instructions that are on the product or provided with the product.



## SAVE THESE INSTRUCTIONS

## USE AND CARE INSTRUCTIONS

- When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
- If the product is placed on a tree, the tree should be well secured and stable.
- Before using, or reusing, inspect product carefully. Discard any products that have cut, damaged or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections and wires.
- When not in use, store neatly in a cool, dry location protected from sunlight.

## USER SERVICING INSTRUCTIONS: SAFETY PLUG WITH REPLACEABLE FUSE:

Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged. The most common reason for a fuse to blow is due to overload from too many sets being strung together.

- Make sure the light set is unplugged.
- To unplug, grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling the cord.
- Risk of fire. Replace fuse only with 125 volt, 3 amp fuse (provided with this product).
- Locate the fuse panel on the plug. Slide the panel open to expose the fuses inside (as shown).
- Remove fuse carefully. Replace the blown (darkened) fuse with the spare fuse included in this set. Close the panel completely by sliding the fuse access cover closed on top of attachment plug.

NOTE: LEDs in this set are non-replaceable. Tampering with this set will void the warranty.



## Connecting Sets End to End

When multiple products are connected together, do not exceed the lowest of the indicated maximum wattage on the cord tag near the connected product's receptacle.  
This lighting string is rated 30 Watts ( 0.25 Amps), do not overload.  
Connect other lighting strings or decorative outfits end-to-end up to a maximum of 216 Watts (1.8 Amps) total. If connecting to a Lighting String that does not have a Wattage (W) rating, on the cord tag within 6 inches of the plug, calculate the wattage as follows: Multiply the current (A), which is also on that cord tag, by 120.  
For example: The Lighting String is rated 120V, 60Hz, 0.2Amps. 0.2x 120 = 24Watts.  
Add the wattage of each light string together for a total of 216 Watts or less. (Do not exceed 216 Watts.)

CAN ICES-005(B)/NMB-005(B)

This device complies with RSS210 of Industry Canada. This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

## Operate the Remote:

- Pull out the plastic film from the battery cover to energize the remote. (Fig. 1)
- The remote has nine buttons (Fig. 2)
  - ON/OFF – Turn set ON/OFF
  - FUNCTION – Press to change the light pattern.

NOTE: Choose function then color


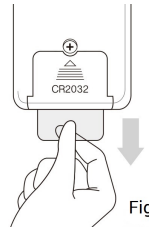 


Fig.1

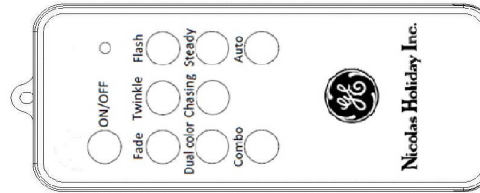 

3. The effective operating distance of the remote is 10 m / 33 ft.


## BATTERY CAUTION:

 - Always purchase the correct size and grade of battery most suitable for the intended use.
- Replace only with CR2032 button batteries.
- Replace all batteries of a set at the same time.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from equipment which is not to be used for an extended period of time.
- Remove used batteries promptly.
- This product contains button batteries. If swallowed, it could cause severe injury or death in just 2 hours. Seek medical attention immediately.
- Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.

OUTSIDE OF COMPARTMENT



INSIDE OF COMPARTMENT

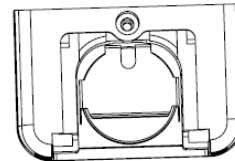

## WARNING - KEEP BATTERIES OUT OF REACH OF CHILDREN

- Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened. Do not use if compartment is not secure.
- Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.
- Tell others about the risk associated with button batteries and how to keep their children safe. Warnings should be placed adjacent to the instruction for replacing batteries. Graphical symbols may be added to either add emphasis.



Examples of Graphical Warnings



For Indoor and Outdoor Use  
120V 60 Hz

Imported by / Importé par :  
Costco Wholesale Canada Ltd.\*  
415 W. Hunt Club Road  
Ottawa, Ontario  
K2E 1C5, Canada  
1-800-463-3783  
www.costco.ca

\* faisant affaire au Québec sous le nom Les Entrepôts Costco

Made in China

For customer service call: 1-866-489-0019  
OPERATING HOURS: January 2 - November 9:  
Monday to Friday, 10 AM - 7 PM EST, November 10 -  
December 23: Monday to Friday, 8 AM - 8 PM EST,  
Saturday & Sunday, 10 AM - 7 PM EST  
December 24-29: 10 AM - 7 PM EST  
(in English only)

See complete schedule at  
[www.geholidaylighting.com](http://www.geholidaylighting.com)  
©2018 Nicolas Holiday Inc.,  
9F., No. 37, Guangfu N. Rd  
Taipei, Taiwan 10560  
All rights reserved.

This is not a toy, for decorative use only.