



with Easy Shape Technology® allows tree branches to spring into shape

Easy Light Technology® eliminates cord connections

6 colors
40 functions

Just assemble and decorate!

Nicolas Holiday Inc. thanks you for your purchase of this pre-lit Christmas tree. With proper use and care, your Christmas tree will provide years of use and memories.

Carefully follow the instructions below on how to assemble and disassemble your pre-lit Christmas tree.

If you should have any problems with your tree, or if the tree does not light after assembly, DO NOT return it to the place of purchase. Please refer to the troubleshooting section of this manual or call our toll free number: 1-877-398-7337 and a customer support representative will assist you.

Our customer support center is open Monday through Friday 10AM to 7PM EST with additional hours throughout the holiday season:

Nov 11 to Dec 23:

Monday – Friday 8:00 am to 8:00 pm EST,

 
Saturday – Sunday 10:00 am to 7:00 pm EST

*Note: Schedule is subject to change at any time. Please check back before contacting us for the most up-to-date schedule.

You may also visit us on the web at www.geholidaylighting.com


Enjoy your holiday!

TREE ASSEMBLY DIAGRAM

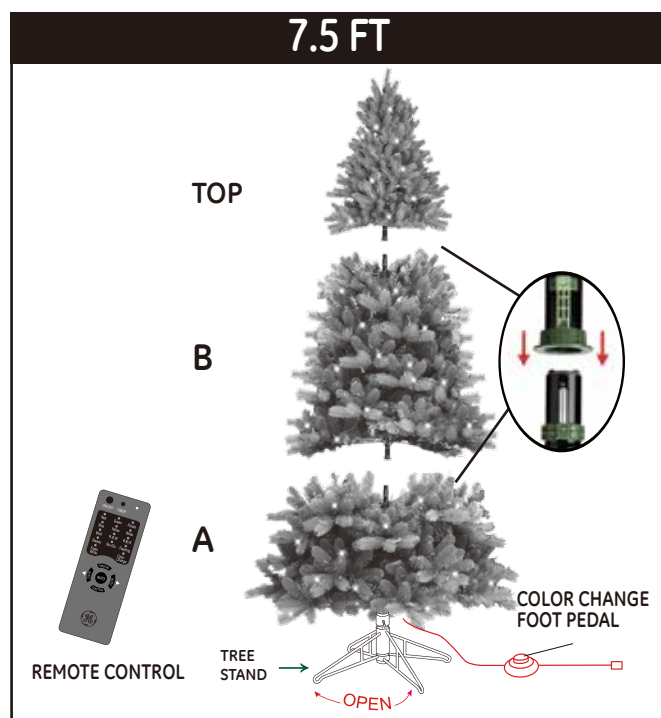

Note: Always unplug this product before installing.
Do not plug in, until entire tree assembled.

 - 1 Remove and unwrap all parts.
Retain shipping carton for repacking.

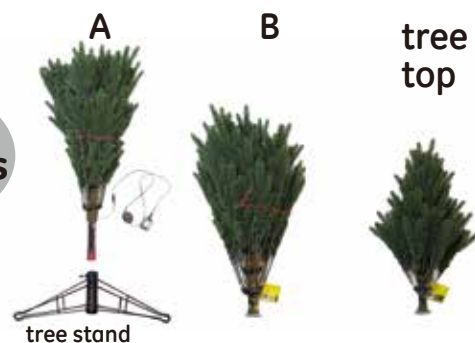

For proper installation and use, the tree must be set up in a clear area without any obstructions and on a flat surface.

NOTE: Before opening stand, be certain the thumbscrew is loosened, so it does not interfere with opening legs.

Place stand in desired location before assembling. Your assembled tree will be heavy and difficult to move.



- 2 Insert section A into tree stand, after first removing red protective cap.



NOTE: Remove twist tie around looped wires with plug adapter, extend wire and set aside.

- 3 Untie RED twist-tie to release branch panels.

Hint: if your branches do not fall into place, DO NOT force down. Gently lift up on the branch panels to release the branch from its locked position. Now, all rows of branches should be in the open position.



Before adding the next section, follow the shaping instructions listed below in **NOTE**.

NOTE: For a natural uniform look, position some branches outward and some upward. Repeat for each branch panel and each tree section.



- 4 Assemble section B into section A.
Firmly seat both sections together.



Repeat step 3.

- 5 Hold tree top with one hand as shown. Gently pull down the outer layer of branches, and fully insert tree top into the top of the pole on section B.



- 6 To illuminate your tree, insert the extension cord plug directly into an electrical wall outlet.
Use remote control or foot pedal to select desired light function.

Color Change Function List:

- STEADY
- SLO-GLO
- MULTI SLO-GLO
- COLOR CHANGE
- FLASHING
- FLASH WHITE
- MULTI FLASHING WHITE
- AUTO FUNCTION



6 colors
40 functions

TO TURN OFF
* Press foot pedal and hold for 4 seconds.



TO TURN ON
* Press foot pedal to return to the same function previously turned off.

If needed, adjust branch tips to make the tree look fuller.

Congratulations!
Your tree is complete and ready to decorate.



Troubleshooting Tips

 
1. If tree does not illuminate, try stepping on the On/Off FOOT PEDAL, or use REMOTE CONTROL. If the tree is plugged into a switch controlled wall outlet, make sure the switch is turned ON.
2. If one section of your tree does not illuminate, check that section for loose or missing LEDs, all factory connections are properly made or that you properly made all the electrical connections between each tree section.
3. Also, check that connector on the main plug is fully secured.
4. All sections need to fully insert together align along with the Indicated white marks.

Most Frequently Asked Questions

- Q. May I add a lighted, decorative tree topper to my tree?
A. Yes, But you would have to use separate extension cord to power the tree topper.
- Q. May I put blinking or flashing bulbs on my tree?
A. No
- Q. May I add extra string sets to my pre-lit tree?
A. No
- Q. May I put my pre-lit tree outside?
A. No. Pre-lit trees are for indoor use only.
- Q. May I hang glass ornaments on a pre-lit tree?
A. Yes, however, do not hang directly on the wires of the lights.
- Q. May I remove a light string bulb and add a pig tailed illuminated or animated ornament or motor?
A. No, removing the bulbs and inserting any additional device into a lamp holder will cause the light set to cease to operate and may revoke the limited warranty of this product.

Tree Storage

1. Remove the tree's main extension cord plug from the wall outlet.
 2. Starting at the top, disconnect the top and section B.
- Step A:** Gently fold the branches up toward the center. Care Should be taken to avoid damage to the lights.
3. Disconnect sections B and A
 4. Refer to the drawing on how to repack your tree.

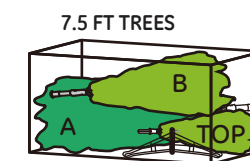

Important: Store your carton neatly in a cool, dry location protected from sunlight to prolong the tree life and to better keep the light sets in working order. Do not place a heavy load on the carton to avoid damage to or crushing the carton and tree inside.

Disclaimer : DO NOT USE OR INSTALL ANY ADDITIONAL CHRISTMAS LIGHTING OR ORNAMENTATION THAT IS POWERED BY A LIGHT BULB SOCKET. DOING THIS MAY RESULT IN DAMAGE TO YOUR CHRISTMAS TREE OR CAUSE PERSONAL INJURY. DOING THIS, WILL RESULT IN A VOID OF THE LIMITED WARRANTY OF THIS PRODUCT.

Spare Parts: Your tree includes a plastic bag containing spare LEDs.

GE is a trademark of General Electric Company and is under license by Nicolas Holiday Inc.

Nicolas Holiday Inc.

Distributed by Nicolas Holiday Inc.,

For indoor use only

©2017 Nicolas Holiday Inc.,

9 F., No. 37, Guangfu North Rd.

Taipei, Taiwan 10560

All rights reserved.

THIS IS NOT A TOY, FOR DECORATIVE USE ONLY.

Printed in China

17116LO

