

# ITM. / ART. 1900213

## IMPORTANT SAFETY INSTRUCTIONS

1.3 m / 4.5 ft Entrance Tree Model: 24LED-7MMb-150(0.09)

When using electrical products, basic precautions should always be followed including the following:

## READ AND FOLLOW ALL SAFETY INSTRUCTIONS

• Do not connect the chain to the supply while in the packaging. This product is for decoration only, not suitable for household room illumination.

- This is an electrical product - not a toy! To avoid the risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- This product is equipped with non-shunted LED type lamps. Do not twist lamps. Push straight in or pull out to avoid damage.
- Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided contact a qualified electrician for proper installation.
- This seasonal use product is not intended for permanent installation or use.
- Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.

- Do not let lamps rest on the supply cord or on any wire.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from cord, wire, or light string.
- Do not close doors or windows on the product or extension cord as this may damage the wire insulation.
- Do not cover the product with a cloth, paper or any material not part of the product when in use.
- Read and follow all instructions that are on the product or provided with the product.

## SAVE THESE INSTRUCTIONS

## CAUTION:

- Risk of fire. This product does not contain lamp shunts, which allow the product to operate if one lamp burns out. Only replace lamps with the spare lamps provided with this product.
- Do not connect the chain to the supply while in the packaging. This product is for decoration only, not suitable for household room illumination.



## USE AND CARE INSTRUCTIONS


- When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
- If the product is placed on a tree, the tree should be well secured and stable.
- Before using, or reusing, inspect product carefully. Discard any products that have cut, damaged or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections and wires.
- When not in use, store neatly in a cool, dry location protected from sunlight.

## USER SERVICING INSTRUCTIONS

- If a number of LEDs are burned out, extra stress is put on the remaining LEDs in the circuit. This may cause additional LEDs to burn out prematurely.

1. **LED REPLACEMENT INSTRUCTIONS**- Use the LEDs provided with this product, follow these steps:
  - a. Make sure the light set is unplugged.
  - b. To unplug, grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling the cord.

2. **CAUTION:** To reduce the risk of overheating, replace with only GE 3.3 volt, 0.066 Watt LED type lamps (provided with product).
3. Grip the base of the burned out LED and pull straight out of the socket. Hold replacement LED by its base and insert into the correct position inside the socket. Push base into socket all the way.

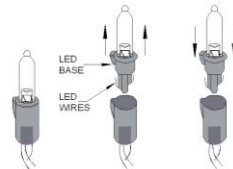

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- \* Reorient or relocate the receiving antenna.
- \* Increase the separation between the equipment and the receiver.
- \* Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- \* Consult the dealer or an experienced radio/TV technician for help.



For Indoor And Outdoor Use  
120 V 60 Hz

Distributed by:  
Costco Wholesale Corporation  
P. O. Box 34535  
Seattle, WA 98124-1535  
USA  
1-800-774-2678  
www.costco.com  
Made in China

If you need assistance or have any questions with set-up or operation  
**For customer service call: 1-866-489-0019**  
**OPERATING HOURS:**

January 2 – November 9:  
Monday to Friday, 10 AM – 7 PM EST,  
November 10 – December 23:  
Monday to Friday, 8 AM – 8 PM EST,  
Saturday & Sunday, 10 AM – 7 PM EST  
December 24 – 29: 10 AM – 7 PM EST  
(in English only)  
See complete schedule at  
www.geholidaylighting.com

Nicolas Holiday Inc.  
204 Spring Hill Rd  
Trumbull, CT 06611

©2018 Nicolas Holiday Inc.,  
9F., No. 37, Guangfu North Rd.  
Taipei, Taiwan 10560 All rights reserved.  
This is not a toy, for decorative use only.