




INSTRUCTION MANUAL FOR REMOTE CONTROL

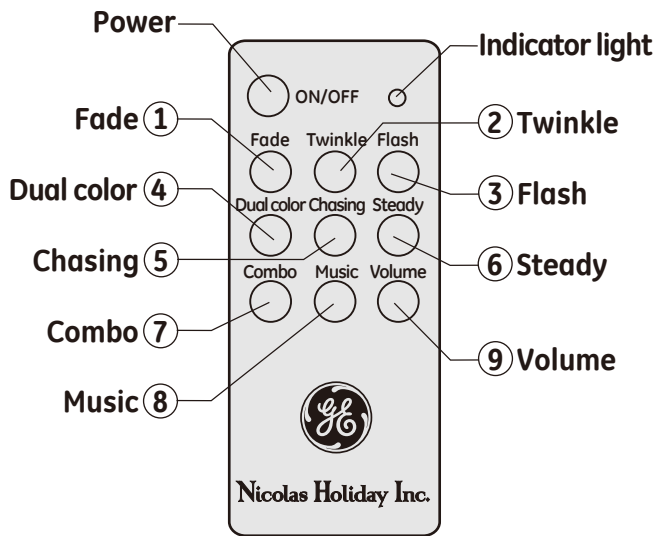

Notes:

- Remote control includes 9 operating modes for color & function combination.
- Each button corresponds to the chart.
- After turning light set on, press desired button for that function. Continue pressing the same button to cycle through all color selections.

Function	① Fade	② Twinkle	③ Flash	④ Dual Color	⑤ Chasing	⑥ Steady	⑦ Combo	⑧ Music	⑨ Volume
1	•Red	•Red	•Red	•Red/Green	• All Colors	•Red	• Auto	• All Music	• High
2	•Green	•Green	•Green	•White/Blue	• Multi Chasing	•Green	• Fade	• Jolly Old Saint Nicholas	• Mid
3	•Purple	•Purple	•Purple	•White/Red	• R/G/W Chasing	•Purple	• Twinkling	• 12 Days of Christmas	• Low
4	•Blue	•Blue	•Blue	•Green/Blue	• R/B/W Chasing	•Blue	• Flash White	• Ding Dong Merrily On High	/
5	•Yellow	•Yellow	•Yellow	•Red/Yellow	/	•Yellow	• Dual Color	• Deck the Halls	/
6	•White	•White	•White	•Purple/Blue	/	•White	• Chasing	• Carol of the Bells	/
7	•Warm White	•Warm White	•Warm White	•White/Multi	/	•Warm White	/	• We wish you a Merry Christmas	/
8	•Multi	•Multi	•Multi	/	/	•Multi	/	• Nutcracker	/
9	•R/B/W	•R/B/W	•R/B/W	/	/	•R/B/W	/	• Jingle Bells	/

GE is a trademark of General Electric Company and is under license by Nicolas Holiday Inc.

Questions, call customer service toll-free at 1-877-398-7337 or visit us on web at www.geholidaylighting.com

Nicolas Holiday Inc.
9 F., No. 37, Guangfu North Rd.
Taipei, Taiwan 10560
All rights reserved.

Remote Control: FP-TX10
Model No. FP-DRXRGB1
FP18