

# ITM. / ART. 1221653

## IMPORTANT SAFETY INSTRUCTIONS

1.8 m / 6 ft Gem Garland Model: C00037a

When using electrical products, basic precautions should always be followed including the following:

## READ AND FOLLOW ALL SAFETY INSTRUCTIONS CAUTION:

- To reduce the risk of fire and electric shock:
  - Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal, and
  - Do not mount or support strings in a manner that can cut or damage wire insulation.

- This is an electrical product - not a toy! To avoid the risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- This product is equipped with push-in type lamps. Do not twist lamps. Push straight in or pull out to avoid damage.
- Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided contact a qualified electrician for proper installation.
- This seasonal use product is not intended for permanent installation or use.
- Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- Do not let lamps rest on the supply cord or on any wire.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from cord, wire, or light string.
- Do not close doors or windows on the product or extension cord as this may damage the wire insulation.
- Do not cover the product with a cloth, paper or any material not part of the product when in use.

- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short circuit may be present and the product should be discarded.
- Read and follow all instructions that are on the product or provided with the product.



## SAVE THESE INSTRUCTIONS

## USE AND CARE INSTRUCTIONS

- When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
- If the product is placed on a tree, the tree should be well secured and stable.
- Before using, or reusing, inspect product carefully. Discard any products that have cut, damaged or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections and wires.
- When not in use, store neatly in a cool, dry location protected from sunlight.

## IMPORTANT INFORMATION ABOUT YOUR LIGHTS

- The lights in this set are connected in 2 or 3 independent 50-light circuits. If one bulb is twisted incorrectly in the base, the 50 lights in that circuit may not light. Therefore, use caution when handling and removing product from the packaging so as not to loosen or damage any bulbs.
- It is important to replace burned out bulbs with those included with this set (2.5 volt, 0.5 watts). If bulbs from another set are used they may burn less brightly.
- The light string should remain lit even if one or more bulbs are burned out, provided the burned out bulb is not removed from the set.

## USER SERVICING INSTRUCTIONS

 
 
**WARNING:** Risk of fire. This product employs overload protection (fuse lamp) in each series light circuit to provide overload protection in addition to the fuse(s) located in the plug. Do not replace the fuse bulb contained in this set with any other type of lamp, use only spare fuse lamp provided with this product.

### Replace the regular lamp.

- Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- Pull lamp and plastic base straight out of lampholder.
- Replace lamp with only 2.5 Volt, 0.5 Watt, super bright type lamp (provided with product).

If the new lamp base does not fit in lampholder, follow the steps below step 3.

- Remove the base of burned out lamp by straightening lamp leads and gently pull lamp out.
- Thread leads of new lamp through holes in old base with one lead in each hole.
- After lamp is fully inserted into base, bend each lead up, like other lamps in the light set so that the leads will touch the contacts inside the lampholder.

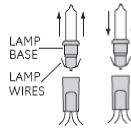

To reduce the risk of overheating, replace burned out lamps promptly. Use 2.5 volt, 0.5 watts lamps only.

### Replace Fuse Bulb

Identify fuse lamp by the green-colored ring on the lamp base. Fuse bulbs are secured in the lamp base with adhesive. Do not attempt to remove fuse bulbs from lamp base. Remove old fuse bulb and lamp base from lamp holder and replace with only 2.5 Volt, 0.5 Watt fuse bulbs and lamp base provided with product.

- Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- Pull fuse lamp and plastic base straight out of lampholder.
- Replace lamp base with fuse lamp (provided with product).

**NOTE:** Risk of fire. Do not use a regular bulb in place of the fuse bulb.

## Connecting Sets End to End

 
When multiple products are connected together, do not exceed the lowest of the indicated maximum wattage on the cord tag near the connected product's receptacle.

If connecting to a lighting string that does not have a Wattage (W) rating (found on the tag within 6 inches of the plug) calculate the wattage as follows: Multiply the current (\_\_\_ A) which is on the flag-type tag by 120. For Example: Lighting string is rated 120 V, 60 Hz, 0.2 Amps.  $0.2 \times 120 = 24$  Watts. Add the wattage of each light string together for a total of 216 Watts or less. (Do not exceed 216 Watts)

## FUSE REPLACEMENT INSTRUCTIONS

### Replace the fuse:

- Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- Open fuse cover. Slide open the fuse access cover on top of attachment plug towards blades.
- Remove fuses carefully.
- Risk of fire. Replace fuse only with 3 Amp, 125 Volt fuse (provided with product).
- Close fuse cover. Slide closed the fuse access cover on top of attachment plug.
- Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.



For Indoor Use Only  
120 V 60 Hz

Imported by / Importé par :  
Costco Wholesale Canada Ltd.\*  
415 W. Hunt Club Road  
Ottawa, Ontario  
K2E 1C5, Canada  
1-800-463-3783  
www.costco.ca

\* faisant affaire au Québec sous le nom Les Entrepôts Costco

Made in China

If you need assistance or have any questions with set-up or operation  
**For customer service call (in English only): 1-866-489-0019 OPERATING HOURS:**  
January 2 – November 9:  
Monday to Friday, 10 AM – 7 PM EST,  
November 10 – December 23:  
Monday to Friday, 8 AM – 8 PM EST,  
Saturday & Sunday, 10 AM – 7 PM EST  
December 24 – 29: 10 AM – 7 PM EST

See complete schedule at  
[www.geholidaylighting.com](http://www.geholidaylighting.com)

Nicolas Holiday Inc.  
204 Spring Hill Rd Trumbull, CT 06611  
© 2018 Nicolas Holiday Inc.,  
9F., No. 37, Guangfu North Rd.  
Taipei, Taiwan 10560  
All rights reserved.