

# LED color choice 100L7.2" Super Sphere

MODEL NO.:  
89162(0.08)

When using electric products, basic precautions should always be followed including the following:

## READ & FOLLOW ALL SAFETY INSTRUCTIONS

1. This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.
2. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
3. Do not use this product for other than its intended use.
4. This seasonal use product is not intended for permanent use or installation.
5. Unplug when leaving the house, when retiring for the night, or if left unattended.
6. Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
7. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
8. Do not hang ornaments or other objects from cord, wire, or light string.
9. Do not place lighting string on carpeting, drapes, furniture, or allow it to contact vinyl siding while the power is on.
10. Do not perform any maintenance or troubleshoot for bad or broken lamps while the power is on.
11. Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
12. Do not cover the product with cloth, paper or any material not part of the product when in use.
13. This product is equipped with non-shunted type L.E.D. lamps. Do not twist or attempt to remove lamps.
14. Do not let lamps rest on the supply cord or on any wire.
15. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
16. Read and follow all instructions that are on the product or provided with the product.
17. The voltage of power source is 120V.

## SAVE THESE INSTRUCTIONS USE AND CARE INSTRUCTIONS

1. Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lamp holders or enclosures, loose connections, or exposed copper wire.
2. Before storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
3. When not in use, store neatly in a cool, dry location protected from sunlight.
4. When the product is used on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
5. If the product is placed on a tree, the tree should be well secured and stable.

## USER SERVICING INSTRUCTIONS: FUSE REPLACEMENT INSTRUCTIONS

 
-SEE OTHER SIDE-

-CONTINUED FROM OTHER SIDE-

Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged. The most common reason for a fuse to blow is due to overload from too many sets being strung together.




1. Make sure the light set is unplugged.
2. To unplug, grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling the cord.
3. Risk of fire. Replace fuse only with 125 volt, 3 amp fuse (provided with this product).
4. Locate the fuse panel on the plug. Slide the panel open to expose the fuses inside (as shown).
5. Remove fuse carefully. Replace the blown (darkened) fuse with the spare fuse included in this set. Close the panel completely by sliding the fuse access cover closed on top of attachment plug.



**Instructions for replacing bulbs:** If a damaged or burned out bulb needs to be replaced, we recommend wearing gloves throughout the replacement process. While holding the sphere with one hand, grab the damaged bulb closest to the husk and gently pull straight up and out of the socket. Insert the spare replacement bulb that is provided with this product into the empty socket.

### To replace lamp:

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Pull lamp and plastic base straight out of lampholder.
3. Replace lamp with only 3.3 V, 20 mA LED type lamp (provided with product).

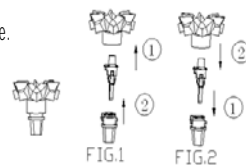

## Connecting Sets End to End

When multiple products are connected together, do not exceed the lowest of the indicated maximum wattage on the cord tag near the connected product's receptacle.

**CAUTION:** 1. This lighting string is rated 9.6 Watts (0.08 Amps), do not overload. If connecting to a lighting string that does not have a Wattage (W) rating (found on the tag within 6 inches of the plug) calculate the wattage as follows: Multiply the current (A) which is on the flag-type tag by 120.

For example: lighting string is rated 120V, 60Hz, 0.1 Amps.  $0.1 \times 120 = 12$  Watts. Add the wattage of each light string together for a total of 24 Watts or less. (Do not exceed 24 Watts) GE stay bright light sets come pre-attached to a control box and plug. For end-to-end connections up to seven (7) sets, you will need only one (1) plug and one (1) control box. To begin, choose one (1) set as your master set. This set would be the only set connected to a control box and plug. Next, unscrew the coaxial connector between the light set and control box on all of the sets you would connect to your master set. Lastly, connect each set of lights end-to-end using the coaxial connections, screwing each connection cap tightly.

- Note: you may only add six (6) additional sets to your master set for a total of seven (7) connected sets.
2. To reduce the risk of overheating, a) replace burned out lamps promptly. Use 3.3 V, 20 mA LED lamps provided with this product. b) Risk of fire. This product does not contain lamp shunts in order to allow the product to operate if one lamp burns out. Do not replace lamps with other than the spare lamps provided with this product.
  3. To reduce the risk of fire electric shock: a) Do not install on trees having needles, leaves or branch coverings of metal or materials that look like metal, and b) Do not mount or support strings in a manner that can cut or damage wire insulation.

### CAN ICES-005(B)/NMB-005(B)

For questions and/or assistance, call customer service at 1-877-398-7337 or visit us on the web at [www.GEholidaylighting.com](http://www.GEholidaylighting.com)

FOR INDOOR AND OUTDOOR USE

MADE IN CHINA

Printed In China

E246482 HC-18

©2018 Nicolas Holiday Inc., 9F., No. 37, Guangfu N. Rd Taipei, Taiwan 10560. All rights reserved.

