




INSTRUCTION MANUAL FOR REMOTE CONTROL

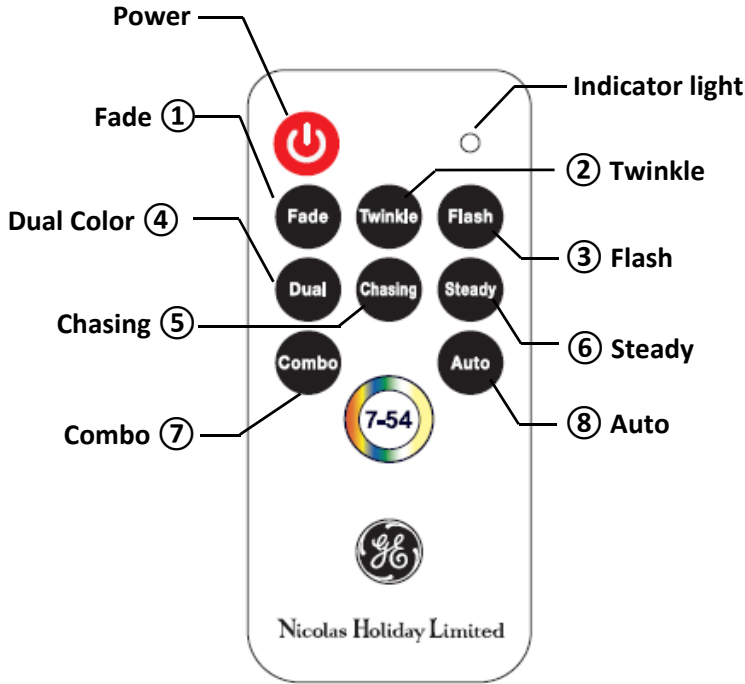

Notes:

- Remote control includes 8 operating modes for color & function combinations.
- Each button corresponds to the chart.
- After turning light set on, press desired button for that function. Continue pressing the same button to cycle through all color selections.

Function	① Fade	② Twinkle	③ Flash	④ Dual Color	⑤ Chasing	⑥ Steady	⑦ Combo	⑧ Auto
1	•Red	•Red	•Red	•Red/Green	•Multi Chasing	•Red	•Fade	• All Function
2	•Green	•Green	•Green	•Blue/Green	•2-Way Cascade	•Green	•Twinkling	/
3	•Purple	•Purple	•Purple	•Purple/Teal	•Color Changing	•Purple	•Flash White	/
4	•Blue	•Blue	•Blue	•White/Blue	•3L Multi Chasing	•Blue	•Dual Color	/
5	•Yellow	•Yellow	•Yellow	•Red/Yellow	•2Color Cascade	•Yellow	•Multi Chasing	/
6	•Teal	•Teal	•Teal	•White/Multi	•2Color Chasing	•Teal	/	/
7	•White	•White	•White	/	/	•White	/	/
8	•Multi	•Multi	•Multi	/	/	•Multi	/	/
9	•R/B/W	•R/B/W	•R/B/W	/	/	•R/B/W	/	/

GE is a trademark of General Electric Company and is under license by Nicolas Holiday Ltd.

Questions, call customer service toll free at 1-866-489-0019 or visit us on web at www.geholidaylighting.com.

Remote Control: HC-TX30
Printed in China
HC21