

ITM. / ART. 2020094

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

100 lights Glitter Gem Garland Model : 00168(0.4)
When using electrical products, basic precautions should always be followed including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS CAUTION:

- To reduce the risk of fire and electric shock:
 - Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal, and

- Do not mount or support strings in a manner that can cut or damage wire insulation.
- To reduce the risk of overheating, replace burned out lamps promptly. Use 2.5 Volt, 0.5 Watt lamps only.
- This is an electrical product - not a toy! To avoid the risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- This product is equipped with push-in type lamps. Do not twist lamps.
- Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided contact a qualified electrician for proper installation.
- This seasonal use product is not intended for permanent installation or use.
- Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.

- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Do not let lamps rest on the supply cord or on any wire.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from cord, wire, or light string.
- Do not place lighting string on carpeting, drapes, furniture, or allow it to contact vinyl siding while the power is on.
- Do not perform any maintenance or troubleshoot for bad or broken lamps while the power is on.
- Do not close doors or windows on the product or extension cord as this may damage the wire insulation.
- Do not cover the product with cloth, paper or any material not part of the product when in use.

- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short circuit may be present and the product should be discarded.
- Read and follow all instructions that are on the product or provided with the product.



SAVE THESE INSTRUCTIONS

USE AND CARE INSTRUCTIONS

- When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
- If the product is placed on a tree, the tree should be well secured and stable.
- Before using, or reusing, inspect product carefully. Discard any products that have cut, damaged or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections and wires.
- When not in use, store neatly in a cool, dry location protected from sunlight.

IMPORTANT INFORMATION ABOUT YOUR LIGHTS

- The lights in this set are connected in **two** independent 50-light circuit. If one bulb is twisted incorrectly in the base, the 50 lights in that circuit may not light. Therefore, use caution when handling and removing product from the packaging so as not to loosen or damage any bulbs.
- It is important to replace burned out bulbs with those included with this set (2.5 volt, 0.5 watts). If bulbs from another set are used, they may burn less brightly.
- The light string should remain lit even if one or more bulbs are burned out, provided the burned out bulb is not removed from the set.

USER SERVICING INSTRUCTIONS

CAUTION: This string contains two different types of Replaceable bulbs- steady-illuminating and fuse bulbs.

 
BULB REPLACEMENT: Before changing bulbs, make sure set is unplugged.

REPLACEABLE FUSED LAMPS-identified by the green colored ring on the lamp base. There is one fuse bulb for each lighted circuit of 50 bulbs. Always replace burned-out bulbs promptly. If a number of bulbs are burned out, extra stress is put on the remaining bulbs in the circuit. This may cause additional bulbs to burn out prematurely. When a fuse bulb fails the entire circuit will not light.

NOTE: Steady and Fuse bulbs are not interchangeable

Replace Steady Bulb

Step 1: Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling cord.




Step 2: Hold bulb by the plastic base and pull bulb/base straight out of socket.



Step 3: Replace lamp with only 2.5 Volt, 0.5 Watt super brightness midjet push-in type lamp provided with product. Push spare bulb/base assembly into socket. Do not twist bulb when inserting into socket. If bulbs are twisted, part of the set will not light.

If the spare bulbs provided with the product have no plastic base or the plastic base does not fit, first follow steps 1-2 above. Then:

- Remove the old bulb by straightening the bulb wires and pulling bulbs straight from the base.
- Replace the new bulb by straightening the bulb leads and aiming each wire into a separate hole in the plastic base.
- Make sure each bulb lead comes out an exit opening at the bottom of the plastic base. Now bend each lead up such that each bulb lead fits closely against the narrow side of the plastic base.

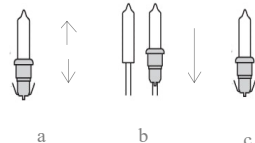

Replace Fuse Bulb

NOTE: Fuse bulbs are secured in the base with adhesive. Do not attempt to remove old fuse bulb and replace with 2.5 Volt, 0.5 Watt fuse bulbs provided with product.

WARNING: Risk of fire. This product employs overload protection (fuse bulb) in each series circuit to provide overload protection in addition to the fuse(s) located in the plug. Do not replace the fuse bulb contained in this set with any other type of bulbs. Use only spare fuse bulbs provided with this product.

FUSE REPLACEMENT INSTRUCTIONS

Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged. The most common reason for a fuse to blow is due to overload from too many sets being strung together.

- Make sure the light set is unplugged.
- To unplug, grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling the cord.
- Risk of fire. Replace fuse only with 125 volt, 3 amp fuse (provided with this product).
- Locate the fuse panel on the plug. Slide the panel open to expose the fuses inside (as shown).
- Remove fuse carefully. Replace the blown (darkened) fuse with the spare fuse included in this set. Close the panel completely by sliding the fuse access cover closed on top of attachment plug.



Connecting Sets End to End

When multiple products are connected together, do not exceed the lowest of the indicated maximum wattage on the cord tag near the connected product's receptacle.

This lighting string is rated 48 Watts (0.4 Amps), do not overload. Connect other lighting strings or decorative outfits end-to-end up to a maximum of 216 Watts (1.8 Amps) total. If connecting to a Lighting String that does not have a Wattage (W) rating, (found on the cord tag within 6 inches of the plug), calculate the wattage as follows: Multiply the current (A), which is on the flag-type tag by 120. For example: Lighting String is rated 120V, 60Hz, 0.2 Amps. $0.2 \times 120 = 24$ Watts. Add the wattage of each light string together for a total of 216 Watts or less. (Do not exceed 216 Watts.)



For Indoor Use Only
120V 60 Hz

Costco Wholesale Canada Ltd.*
415 W. Hunt Club Road
Ottawa, Ontario
K2E 1C5, Canada
1-800-463-3783
www.costco.ca

* faisant affaire au Québec sous le nom les Entrepôts Costco

Made in China

For customer service call: 1-866-489-0019
OPERATING HOURS: January 4 - November 12:
Monday to Friday, 10 AM -7 PM EST, November 13-
December 23: Monday to Friday, 8 AM - 8 PM EST,
Saturday & Sunday, 10 AM-7 PM EST
December 27-29: 10 AM - 7 PM EST

See complete schedule at
www.geholidaylighting.com

©2021 Nicolas Holiday Limited, 9F., No. 37, Guangfu
N. Rd Taipei, Taiwan 10560.

All rights reserved.

This is not a toy, for decorative use only.