



GE Branded Christmas Trees

with Perfect Shape Technology™
minimizes shaping

Easy Light Technology®
eliminates cord connections

Just assemble and decorate!

Nicolas Holiday Inc. thanks you for your purchase of this pre-lit Christmas tree. With proper use and care, your Christmas tree will provide years of use and memories.

Carefully follow the instructions below on how to assemble and disassemble your pre-lit Christmas tree.

If you should have any problems with your tree, or if the tree does not light after assembly, DO NOT return it to the place of purchase. Please refer to the troubleshooting section of this manual or call our toll free number: 1-877-398-7337 and a customer support representative will assist you.

Our customer support center is open Monday through Friday 10AM to 7PM EST with additional hours throughout the holiday season:

Nov 11 to Dec 23:

Monday – Friday 8:00 am to 8:00 pm EST,


Saturday – Sunday 10:00 am to 7:00 pm EST

*Note: Schedule is subject to change at any time. Please check back before contacting us for the most up-to-date schedule.

You may also visit us on the web at www.geholidaylighting.com


Enjoy your holiday!

TREE ASSEMBLY DIAGRAM

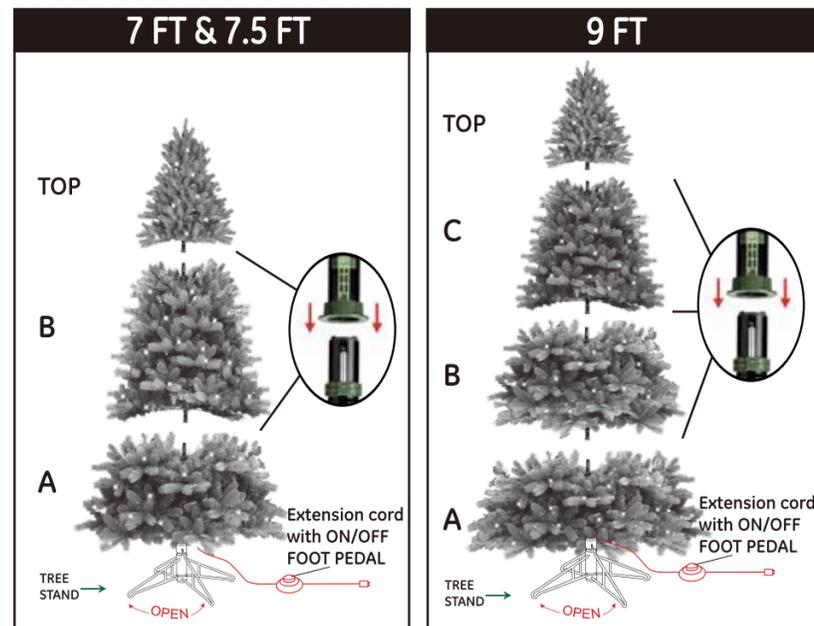

Note: Always unplug this product before installing.
Do not plug in, until entire tree assembled.

- 1 Remove and unwrap all parts. Retain shipping carton for repacking.

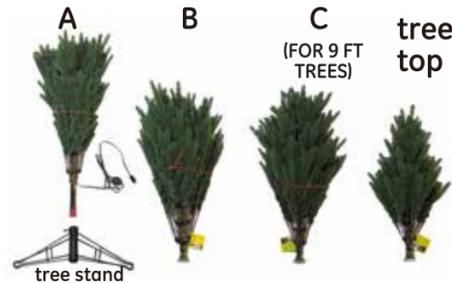


For proper installation and use, the tree must be set up in a clear area without any obstructions and on a flat surface.

NOTE: Before opening stand, be certain the thumbscrew is loosened, so it does not interfere with opening legs.

Place stand in desired location before assembling. Your assembled tree will be heavy and difficult to move.

Open tree stand.

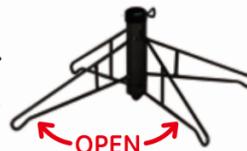

- 2 Insert section A into tree stand, after first removing red protective cap.

NOTE: Remove twist tie around looped wires with plug adapter, extend wire and set aside.

- 3 Untie RED twist-tie to release branch panels. All branches should fall into place with a gentle pull on the outer layer of branches.



- 4 Assemble section B into section A.

Firmly seat both sections together.



- 5 Untie RED twist-tie to release branch panels. All branches should fall into place with a gentle pull on the outer layer of branches

- 6 Assemble section C into section B.

Firmly seat both sections together.



- 7 Untie RED twist-tie to release branch panels. All branches should fall into place with a gentle pull on the outer layer of branches.

- 8 Hold tree top with one hand as shown. Gently pull down the outer layer of branches, and fully insert tree top into the top of the pole on section B (or C).



- 9 To illuminate your tree, insert the extension cord plug directly into an electrical wall outlet.

Congratulations!
Your tree is complete and ready to decorate.



Q. May I remove a light string bulb and add a pig tailed illuminated or animated ornament or motor?
A. No, removing the bulbs and inserting any additional device into a lamp holder will cause the light set to cease to operate and may revoke the limited warranty of this product.

Tree Storage

1. Remove the tree's main extension cord plug from the wall outlet.
 2. Starting at the top, disconnect the top and section B (or C).
- Step A:** Gently fold the branches up toward the center. Care should be taken to avoid damage to the lights.
3. Disconnect sections B and A (or sections C and B).
 4. Refer to the drawing on how to repack your tree.



Important: Store your carton neatly in a cool, dry location protected from sunlight to prolong the tree life and to better keep the light sets in working order. Do not place a heavy load on the carton to avoid damage to or crushing the carton and tree inside.

Disclaimer: DO NOT USE OR INSTALL ANY ADDITIONAL CHRISTMAS LIGHTING OR ORNAMENTATION THAT IS POWERED BY A LIGHT BULB SOCKET. DOING THIS MAY RESULT IN DAMAGE TO YOUR CHRISTMAS TREE OR CAUSE PERSONAL INJURY. DOING THIS, WILL RESULT IN A VOID OF THE LIMITED WARRANTY OF THIS PRODUCT.

ATTENTION:
Replaceable fused lamps - identified by the white colored ring at the top of the lamp holder. Refer to the UL light string instructions when replacing these lamps.

Spare Parts: Your tree includes spare bulbs, replaceable fused bulbs and spare 3-amp fuses as replacements for the lighting strings and (1) 5-amp fuse for the plug.

Troubleshooting Tips

If the tree does not illuminate, try stepping on the On/Off FOOT PEDAL and make certain the wall switch is turned on.

If one section of your tree does not illuminate, check that section for loose or missing bulbs, all factory connections are properly made or that you properly made all the electrical connections between each tree section, i.e., tree plug to extension cord outlet. Also, check the fused plug for a missing or burned out (open) fuse.

Most Frequently Asked Questions

- Q. May I add a lighted, decorative tree topper to my tree?
A. Yes, There is an outlet on the back of the bladed plug of the tree top.
- Q. May I put blinking or flashing bulbs on my tree?
A. No
- Q. May I add extra string sets to my pre-lit tree?
A. No
- Q. May I put my pre-lit tree outside?
A. No. Pre-lit trees are for indoor use only.
- Q. May I hang glass ornaments on a pre-lit tree?
A. Yes, however, do not hang directly on the wires of the lights.

GE is a trademark of General Electric Company and is under license by Nicolas Holiday Inc.

Nicolas Holiday Inc.

Distributed by Nicolas Holiday Inc.,

For indoor use only

©2017 Nicolas Holiday Inc.,

9 F., No. 37, Guangfu North Rd.

Taipei, Taiwan 10560

All rights reserved.

THIS IS NOT A TOY, FOR DECORATIVE USE ONLY.

Printed in China

PERFECT17-ONEPLUG

GE Arbres de Noël de marque GE

Perfect Shape Technology™
effort minimal pour placer les branches

Technologie Easy Light®
qui élimine les raccords électriques

Vous n'avez qu'à assembler et décorer!

Nicholas Holiday Inc. vous remercie d'avoir acheté cet arbre de Noël illuminé. Grâce à une utilisation correcte et un entretien adéquat, votre arbre de Noël vous fournira des années d'usage et de souvenirs.

Suivre attentivement les instructions ci-dessous afin de savoir comment assembler et démonter votre arbre de Noël illuminé.

Si vous avez des problèmes avec votre arbre ou si celui-ci ne s'allume pas après l'assemblage, NE PAS le retourner à l'endroit où il a été acheté.

Veillez vous référer à la section dépannage de ce manuel ou appeler notre numéro sans frais au : 1 877 398-7337 et un(e) représentant(e) au service à la clientèle vous apportera son aide. Notre service à la clientèle est ouvert du lundi au vendredi de 10 h à 19 h (HNE), en plus des heures prolongées durant la Période des Fêtes, 11 nov. au 23 déc. lundi au vendredi, 8 h à 20 h. Samedi et dimanche, 10 h à 19 h, HNE.


*Remarque : L'horaire peut changer en tout temps. Veuillez vérifier avant de nous contacter pour obtenir l'horaire à jour.

Vous pouvez également nous visiter en ligne

au www.geholidaylighting.com


Profitez bien de la période des Fêtes!

SCHÉMA D'ASSEMBLAGE DE L'ARBRE

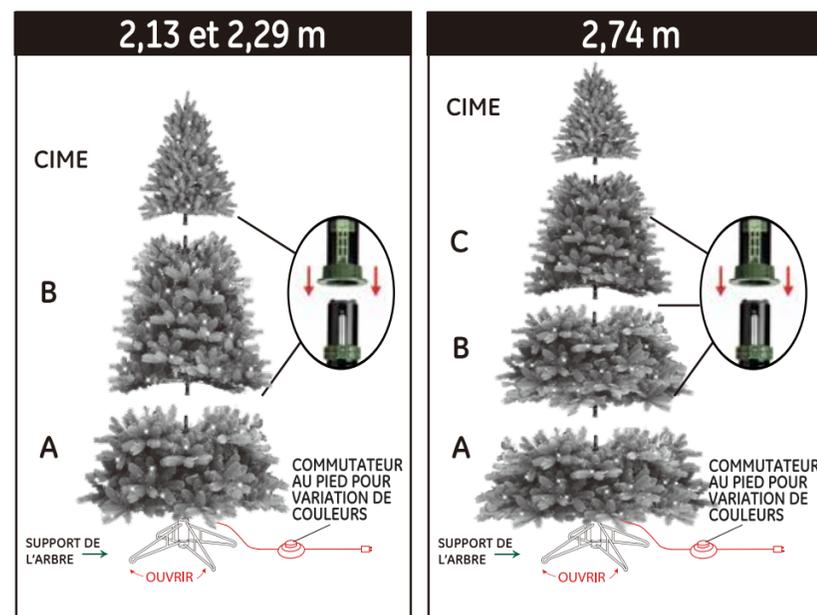

Remarque : Débranchez toujours ce produit avant de l'installer. Ne le branchez pas avant que l'arbre soit entièrement assemblé.

1 Sortir et déballer toutes les pièces. Conserver le carton pour le réemballage ultérieur.

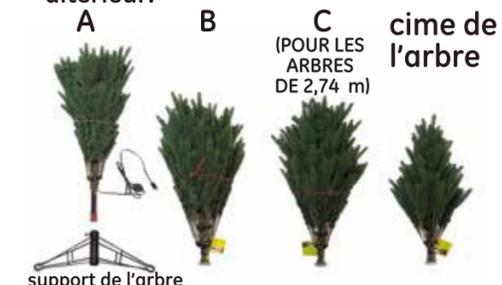

En vue d'une installation et d'une utilisation adéquates, l'arbre doit être installé dans un endroit dégagé, exempt de tout obstruction et sur une surface plane.

REMARQUE : Avant d'ouvrir le support de l'arbre, s'assurer que la vis de serrage est relâchée, afin de ne pas interférer avec l'ouverture des pattes.

Placer le support à l'endroit choisi avant l'assemblage.

Votre arbre assemblé sera lourd et difficile à déplacer.

Ouvrir le support de l'arbre.

2 Insérer la partie A dans le support de l'arbre, après avoir retiré le capuchon de protection rouge.



REMARQUE : Retirer le lien torsadé autour des fils enroulés avec l'adaptateur de prise, dérouler les fils et mettre le tout de côté.

3 Défaire le lien torsadé ROUGE de manière à relâcher les couches de branches. Toutes les branches devraient se mettre en place suite à un léger mouvement de traction sur la couche extérieure de branches.

4 Assembler la partie B dans la partie A. Asseoir fermement chaque partie l'une dans l'autre.



5 Défaire le lien torsadé ROUGE de manière à relâcher les couches de branches. Toutes les branches devraient se mettre en place suite à un léger mouvement de traction sur la couche extérieure de branches.

6 Assembler la partie C dans la partie B. Asseoir fermement chaque partie l'une dans l'autre.

7 Défaire le lien torsadé ROUGE de manière à relâcher les couches de branches. Toutes les branches devraient se mettre en place suite à un léger mouvement de traction sur la couche extérieure de branches.

8 Soulever la cime d'une main, tel qu'illustré. Exercer une légère traction vers le bas sur la couche extérieure de branches, puis insérer complètement le cime de l'arbre dans la section supérieure de la partie B (ou C).



9 Pour illuminer votre arbre, insérer la fiche de la rallonge électrique directement dans une prise murale.

Félicitations!
Votre arbre est terminé et maintenant prêt à être décoré.



Q. Puis-je retirer une ampoule du cordon lumineux et ajouter une décoration illuminée disposant d'une extrémité en tire-bouchon, animée ou à moteur?

A. Non, le fait de retirer les ampoules et insérer tout dispositif additionnel dans une douille d'ampoule occasionnera un arrêt de fonctionnement du cordon lumineux et sera de nature à révoquer la garantie limitée de ce produit.

Entreposage de l'arbre


1. Retirer la rallonge électrique principale de l'arbre de la prise murale.
2. En commençant vers le haut, débrancher la cime et la partie B (ou C)

Étape A : Replier délicatement les branches vers le haut en direction du centre. Prendre soin de ne pas endommager les ampoules.


3. Débrancher les parties B et A (ou parties C et B)

4. Vous référer à l'illustration ci-dessous afin de savoir comment réemballer votre arbre.

POUR LES ARBRES DE 2,13 et 2,29 m

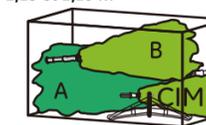

POUR LES ARBRES DE 2,74 m

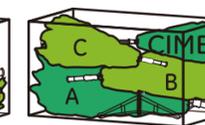

Important : Entrez votre carton proprement dans un endroit frais et à l'abri du soleil afin de prolonger la vie de l'arbre et conserver les cordons lumineux en bon état de fonctionnement. Ne pas placer de lourde charge sur le carton afin d'éviter d'endommager ou d'écraser le carton et l'arbre se trouvant à l'intérieur.

Avis de non-responsabilité : NE PAS UTILISER OU INSTALLER TOUT TYPE D'ÉCLAIRAGE OU DE DÉCORATIONS DE NOËL ADDITIONNELLES QUI NE SONT PAS ALIMENTÉS AU MOYEN D'UNE DOUILLE. LE FAIRE PEUT RÉSULTER DANS DES DOMMAGES À VOTRE ARBRE OU CAUSER DES BLESSURES. ET CELA ANNULERA LA GARANTIE LIMITÉE DE CE PRODUIT.

ATTENTION :
Les ampoules à fusible remplaçables peuvent être identifiées grâce à leur anneau blanc situé au haut de la douille d'ampoule.
Se référer aux instructions relatives aux cordons lumineux UL lors du remplacement de ces ampoules.

Pièces de rechange : Votre arbre comprend des ampoules de rechange, des ampoules à fusible remplaçables et des fusibles de rechange de 3 A pour les guirlandes lumineuses et un (1) fusible de 5 A pour la prise.

GE est une marque de commerce de la société General Electric Company et est utilisée sous licence par Nicolas Holiday Inc.

Nicolas Holiday Inc.

Distribué par Nicolas Holiday Inc.,

Pour une utilisation à l'intérieur uniquement

©2017 Nicolas Holiday Inc.,

9 F., No. 37, Guangfu North Rd.

Taipei, Taiwan 10560

Tous droits réservés

CECI N'EST PAS UN JOUET,

POUR USAGE DÉCORATIF SEULEMENT

Imprimé en Chine

PERFECT17-ONEPLUG-FR