

Type A

Easy Light Technology Color Choice LED Pre-lit Tree

Troubleshooting steps when an entire tree is not lit.


Possible Reasons:

- Wall outlet without power (120V)
- Foot Pedal not switched ON
- Defective Adapter
- Defective Foot Pedal Switch


Check Step:

1. Check if 120V wall outlet is working by plugging in other light sets or house hold appliances like electric fan or lamp shades to confirm.

Check Outlet With Power



2. Plug-in the fully assembled tree into wall outlet after confirming wall outlet is working.

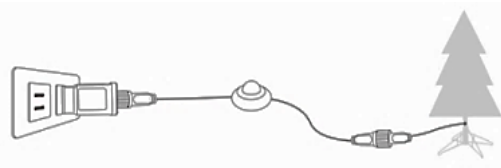

3. Step on the footswitch to different function several times to make sure tree is not turned off.



4. If the above trouble shooting doesn't work, adaptor needs to be tested. Do steps A to D below.

Step A: Disconnect Adapter from the foot pedal switch cord.

Step B: Disconnect the foot pedal switch cord from the tree bottom section pole connecting wire.

Step C: Directly connect the adapter to the tree bottom section pole male connector.


Step D: Plug in tree adapter to a 120V outlet. Use an extension cord if necessary. If the whole tree or any of the tree sections light-up foot pedal cord is defective needs repair or replacement, otherwise continue doing bottom section trouble shooting step 5.

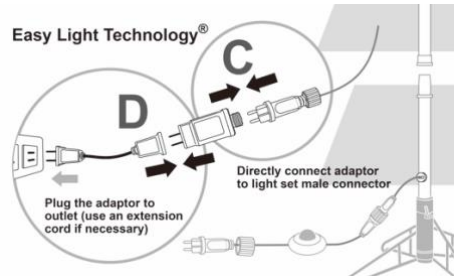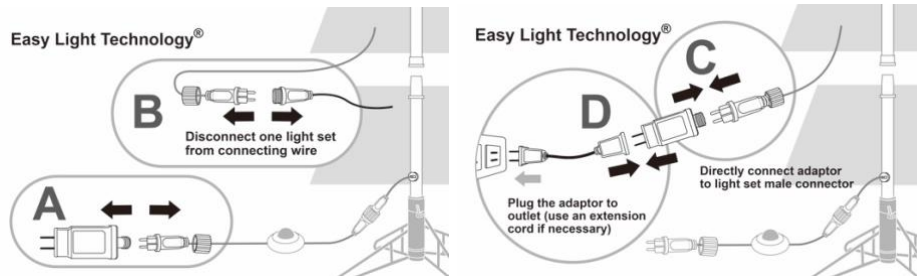

5. If the above trouble shooting doesn't work, suspected broken part is adapter, please do steps below.


Step E: Unplug adapter from wall outlet and disconnect the adapter from the tree bottom section pole male connector.

Step F: Disconnect a light string set from the tree pole connecting wire.

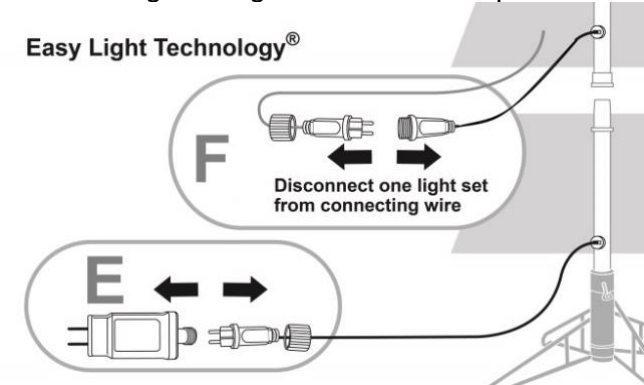

Step G: Directly connect the adapter to the tree light string.

Step H: Plug-in tree adapter to a 120V outlet. Use an extension cord if necessary.

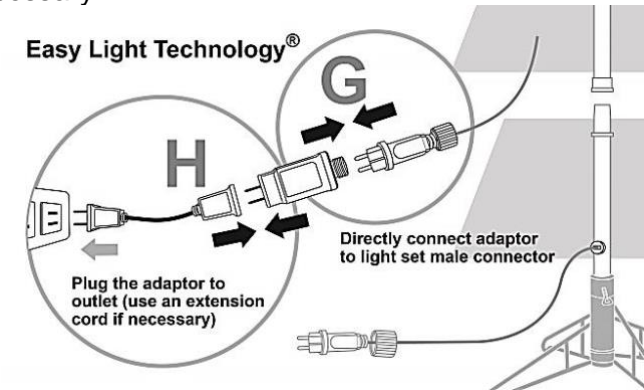

- If the tree light string the adapter was connected to do not light up, adapter is broken needs repair or replacement.
- If the tree light string the adapter was connected to lights up, connection between bottom section and its upper section is defective and needs repair or replacement. Call customer service for further assistance.

Nicolas Holiday Inc.

Distributed by Nicolas Holiday Inc.,

©2018 Nicolas Holiday Inc.,9 F., No. 37, Guangfu North Rd.

Taipei, Taiwan 10560

All rights reserved.